

# HANGRAIL ASSEMBLY

Illustration 1


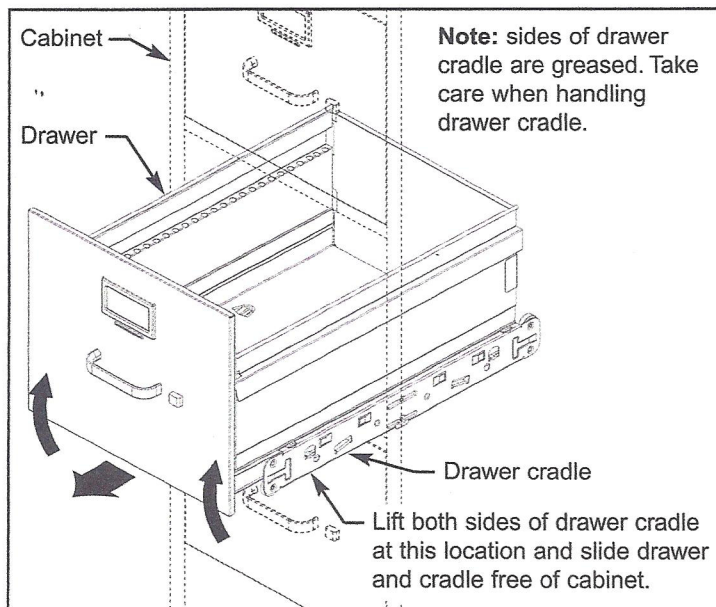


Illustration 2

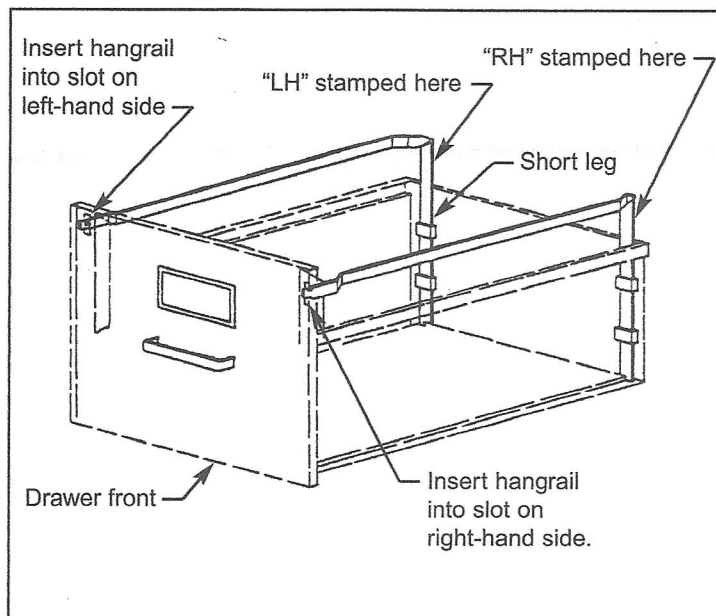

P/N: A425

Read all instructions and review illustrations before installing.

Tools required for assembly:  
\*None

This assembly includes:  
(1) Right-hand hangrail  
(1) Left-hand hangrail

## WARNING

Removing a loaded drawer can cause the cabinet to tip and fall. To avoid injury, empty contents of drawer before removing from cabinet. Sharp edges may cause injury. Take care when handling metal parts.

### Installation:

1. Refer to Illustration 1. Remove contents from drawer.

### NOTES

Sides of drawer cradle are lubricated with a light grease. Take care when handling drawer cradle. Use care when handling drawer cradle. Do not bend or deform drawer cradle cross member.

2. Refer to Illustration 1. Remove drawer from cabinet by opening drawer until the drawer cradle extends outward past the cabinet. Lift up on drawer cradle (until cradle cross member clears cabinet horizontal divider - approximately 2 1/2") and slide drawer and drawer cradle out and away from cabinet.
3. Place drawer and drawer cradle assembly onto a clean work space.
4. Refer to Illustration 2. Select the right-hand hangrail. Its profile should match the illustration and will have a "RH" stamped on the short leg.
5. Refer to Illustration 2. Insert the long leg of hangrail into the slot at the front of drawer. Tilt rear of hangrail upward.
6. Refer to Illustration 2. Insert the short leg of hangrail into tabs at rear of drawer.
7. Refer to Illustration 2. Push down on rear of hangrail until the short leg touches the drawer bottom.
8. Repeat Steps 4 through 7 for left-hand hangrail.
9. Refer to Illustration 1. Reinstall drawer by inserting rear of drawer and drawer cradle assembly into the track attached to each side of cabinet. Carefully lift (until cradle cross member clears cabinet horizontal divider - approximately 2 1/2") and slide drawer and drawer cradle rearward until drawer is fully closed. Carefully slide drawer open to verify drawer slides freely and drawer stop operates properly.
10. Reload drawer.

INSTALLATION INSTRUCTIONS

**Problem Solver**

Office Furniture & Parts

1053 E. Whitaker Mill Road

Ste 185

Raleigh, North Carolina 27604

Ph: 800-286-5471

Fax: 919-596-5559

psorders@problemsolver.us

Unique Supplier of  
Replacement Office Furniture Parts



www.oodlesofpartsplus.com  
www.businessfurnitureshop.com

www.filebars.com  
www.keysolver.com